

- ·Peggy requires a measuring pipette to be into the nozzle prior to use.
- •Do not aspirate any sample or liquid beyond the pipette or into the nozzle.
- ·Do not disassemble this product.
- ·Press the aspiration and discharge buttons slowly and smoothly. Rapid action may cause problems such as contamination, or splashing of the sample.
- •Do not tilt the pipette sideways when a sample is held inside of the measuring pipette.
- ·Use caution and refer to pertinant regulations when pipetting contaminants, radioactive or toxic materials.
- ·Verify the chemical compatibilty of the measuring pipette before use, especially when using organic solvents or highly reactive materials.
- ·Use caution when making volume changes with samples that are highly volatile or have different physical properties.
- ·Maintain a constant temperature of Peggy, the measuring pipettes and the samples to be measured when pipetting. Temperature variations can cause inaccuracy in pipetting volumes.
- •Do not clean this product with highly reactive solvents such as acetone, etc.
- ·Use Watson brand measuring pipettes.

To reduce physical stress from repetitive operation.

You can reduce physical stress by taking off the water-stop filter and replacing the joint packing with the "non filter type".


Precaution


Pay attention to the aspiration volume setting.

When the water stop filter is taken off, improper volume setting can cause excess aspiration into the product. Make sure the aspiration volume is set suitably for the volume of the pipette to be used.

① Turn the top of the nozzle anticlockwise by 35 degrees.

2 Pull off the joint packing and the water stop filter.

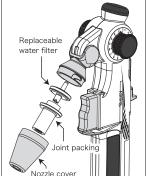

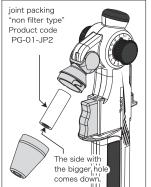

3 Replace the joint packing with the "non filter type", and fit the nozzle cover.

Made in Japan



Sales agency: WATSON CO., LTD.

Export Division: 2-2-7 Murotani Nishi-ku Kobe, 651-2241, JAPAN TEL 81-78-991-4489 FAX 81-78-991-4491 E-mail: tcr@watson.co.jp Head Office: 1F, 14-17 Daikanyama-cho, Shibuya-ku, Tokyo, 150-0034, JAPAN TEL 81-3-5615-3591 FAX 81-3-6427-0740 Manufacturer: FUKAEKASEI co, LTD.

WATSON User Instruction


For Research

Repetitive Pipette Peggy

Batteries not required. Ideal for equick and easy repetitive pipetting.

Product name	Repetitive Pipette Peggy
Cat. No.	PG-01

Parts Name

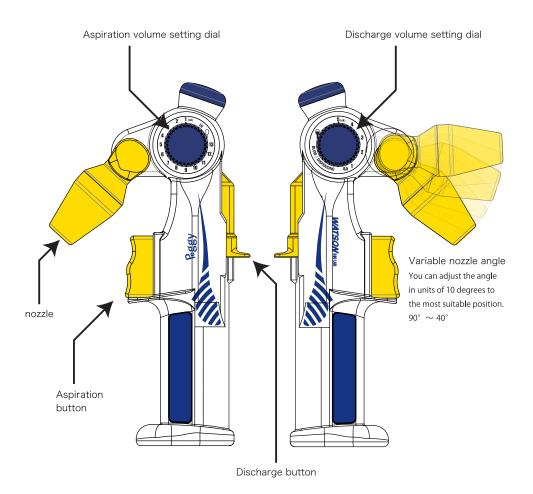


Aspiration

Discharge

Hold Peggy to keep the measuring pipette in vertical position during aspirating or discharging. * Operation while keeping the measuring pipette in diagonal position may cause incorrect accuracy.

To set the aspiration volume

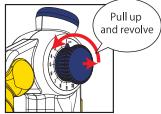

Caution when using 5mL measuring pipette:

Please do not aspirate volumes above 5mL when using a 5mL measuring pipette or the sample may be aspirated into this product and cause contamination. In case of contamination, remove the nozzle and joint packing, clean and replace the filter if the sample was aspirated into this product(refer to "Filter replacement").


(2) Fit a measuring pipette




(3) Aspiration

Push in the aspiration button once slowly and smoothly until the button stops to aspirate the set volume.

*Make sure the aspiration button is back at the original position before aspiration.

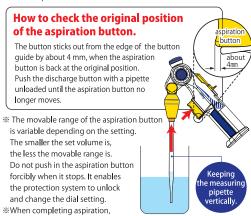

pull up the tip of mesuring pipette slowly from the liquid surface. Rapid action may lead to liquid droplet falling by the law of inertia. 1) To set the discharge volume

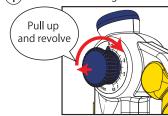

2 Discharge

A single push of the discharge button discharges the set volume. *Keep the button pressed until the liquid stops coming out from

Release the button and it returns to the original position for the next discharge. The discharge button enables you to discharge the same volume repeatedly.

*When you discharge repeatedly, make sure the button comes back to the top position every time discharge is completed.

Discharging before the button comes back to the position results in less volume than preset to obtain.


the upper part of

doesn't return to


discharging button

indicates that the button


*When you discharge higher volume, press the discharge button slowly. Rapid action causes droplets left on the inner wall of the pipette and the loss of accuracy.

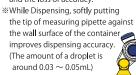

*The aspiration button comes back to the original position as Release your fingers from the aspiration button while

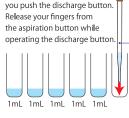


Dispensing volumes can be adjusted after the initial aspiration. For example if you aspirate 12mL. you can dispense different volumes totaling 12mL(e.g. 1mL, 1mL, 2mL, 2mL, 3mL and 3mL).

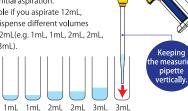


Filter replacement

1 Turn the nozzle 35 degrees to remove.

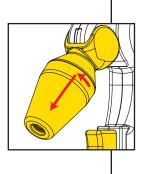

2 Pull off the water stop filter and the joint packing.

(3) Fit the new filter and sterilized joint packing.

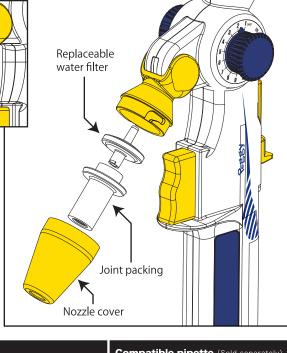

Specification _*			
Aspiration Volume	Max. Aspiration Volume	Min. Aspiration Volume	
	13mL	1 mL	
Discharge Volume	Max. Discharge Volume	Min. Discharge Volume	
	5mL	0.5mL	
Accuracy	Aspiration 1 mL, 2 mL: ±10% more than 3 mL: ±5%		
	Discharge 0.5mL, 1mL: ±10%more than 1.5mL: ±5%		
Precision	Discharge 1mL、2mL:≦10% more than 3mL:≦5%		
	Discharge 0.5mL、1mL∶≦10%more than 1.5mL∶≦5%		
Nozzle Angle	40°∼90° Variable in the unit of 10°		
Water Filter	Cat# PG-01-SF1		
Joint Packing	Autoclavable Cat# PG-01-JP1		
Nozzle Cover	Autoclavable		
Size	W 70mm×H 224mm×D 117mm~137mm (Variable depending on the nozzle angle.)		
Weight	180 g		



**Specification as of 26.9.2014. Specification is subject to change for improvement without notice.